TA-851B


PACKING LIST

NO.	O. Name		Quautity Image		
1	m ain unit (built-in amplifier)		1		
2	Main	unit support	4		
3	Instru	uction sheet	1		
4	VHF vibrator		4		
5	Plastic director support		2		
6	Reflector		6		
7	UHF dipole		4		
8	UHF director		20		
9	Attachment	Plastic connector	4		
10		Screw 3x8	14	₹	
11)		Screw 3x12	4	<1111B	
12	ıt	Сар	16		
13)	Powe	er supply box	1		
14)	Remote	e-controlled ware	1		

TV. REMOTE-CONTROLLED ROTATING ANTENNA

Characteristics:

- VHF/UHF full channel with booster
- Two directors, two dipoles good receptivity
- Full-direction(350°) rotation
- Infrared remote control and rotating
- Low noise, high gain, clear picture, good vioce
- Solid structure,waterproof
- · Easy to use and installation

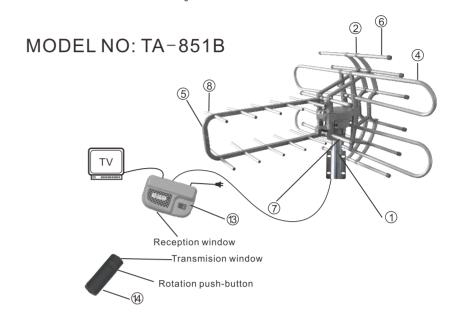



Caution:


- Rotation motor and booster cannot be disassembled freely.
- 2. Power supply should be kept 1M distance with TV. Switch it off when not used
- 3. Remote controller should be directed at the reception window.
- 4. To adjust direction by pushing the button on the power supply.


Specifications


	Channels	Frequency(MHz)	Gain(dB)	Rotation	Impedance(Ω)	Power
	VHF 1-12	45-230	20-28	350°	75	110V120V 50Hz/60Hz
	UHF 21-69	470-860				

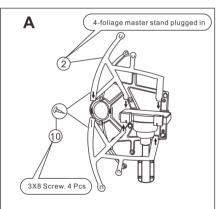


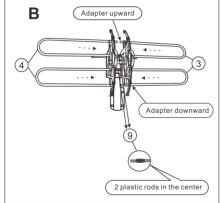


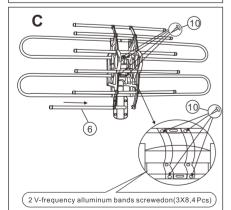


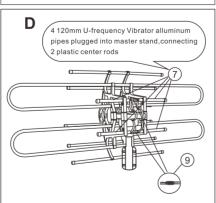

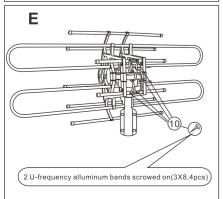

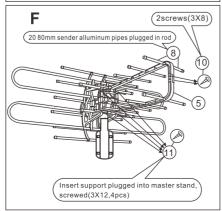

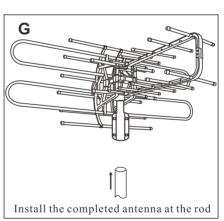

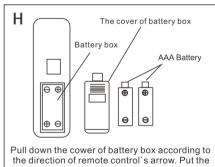

Pull down the cower of battery box according to the direction of remote control's arrow. Put the No 7 battery into the battery box according to the indication of positive pole and negative pole and cover the cover.

Notes

- 1.A geared-down engine, gearing wheel and low-noise microwave amplifier are built in the master. Only professional technicians are suggested to disassemble and assemble them.
- $2. In stall\ according\ to\ the\ procedures\ shown\ in\ the\ diagram, Make\ sure\ everything\ is\ tightened.$
- ${\it 3. Please use }\ description\ and\ procedures\ shown\ in\ the\ dia\ gram, Make\ sure\ everything\ is\ tightened.$
- 4. The antenna should be installed in a high position with few barriers around.
- 5. Power pack should be place 1 m away from TV set. Don't place it on top of TV. Place it in a dry place and clean the dust occasionally.
- 6. When using remote controller, direct the remote-controller at the acceptor window of the power pack.