

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

Only for domestic use

Use tips:

- *Put the chair stably on a flat floor.
- *Mount the garden chairs in the shelter of the weather.
- *Stay away from open flames.
- *Don't hang anything in the structure.
- *Avoid the overload at the anchors/structure.
- *It is advised that don't stay on the chairs when there is a storm.
- *Do not use in adverse weather condition and cover furniture when not in use.

Precautions before assembly:

- *Prepare a clean and dry mounting area.
- *Verify that the product is not damaged.
- *Check that none of the pieces are missing.

Maintenance:

- *Clean with a soft fabric.
- *Regularly remove leaves and / or water collected on the canvas.
- *Check the chair regularly.

Storage conditions:


- *The fabric should be stored completely dry, in a clean and dry place to avoid the risks of mold.

Maintenance:


- *Don't use this product if the seat cloths, cloth cushion or tarpaulins are ageing, and contact our customer service.

Caution with the risks of pinching or cuts during assembly.


The manufacturer declines all responsibility in case of damages due to a bad installation or due to weather.

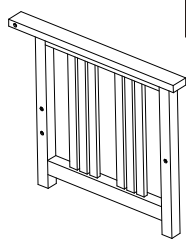


AA x01

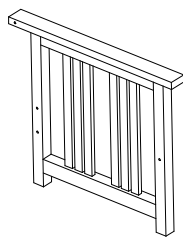


BB x01

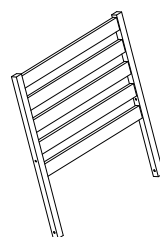


CC x01

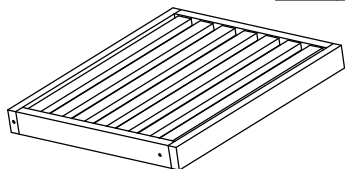


DD x01

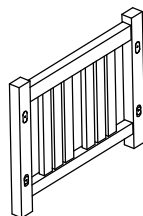


EE x02

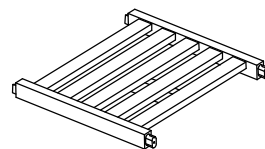


FF x01




GG x02

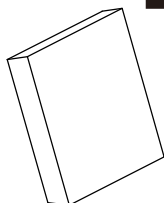

HH x01

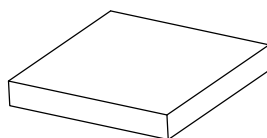

II x01



JJ x01

HARDWARE



A x02
M6*80




B x02
M6*95



C x02
M6*100



D x02
M6*70



E x06
M6
+1(spare)



F x06
Φ16*1.4
+1(spare)



G x06
Φ9.3*3
+1(spare)



H x08
M6*45
+1(spare)



I x01
M6



J x01
M6



K x02
M6

FR_ Ne pas confondre des vis similaires. Ne serrez pas les boulons à fond tant que toutes les pièces ne sont pas connectées!

ES_ No confunda tornillos similares. No apriete los tornillos completamente hasta que todas las partes están conectadas!

DE_ Verwechseln Sie ähnliche Schrauben nicht. Ziehen Sie die Schrauben erst fest an, wenn alle Teile verbunden sind!

IT_ Non confondere le viti simili. non serrare completamente i bulloni fino a tutte le parti non sono ancora collegate!

01


B x02
M6*95



D x02
M6*70



E x02
M6




F x02
Φ16*1.4



G x02
Φ9.3*3



K x02
M6

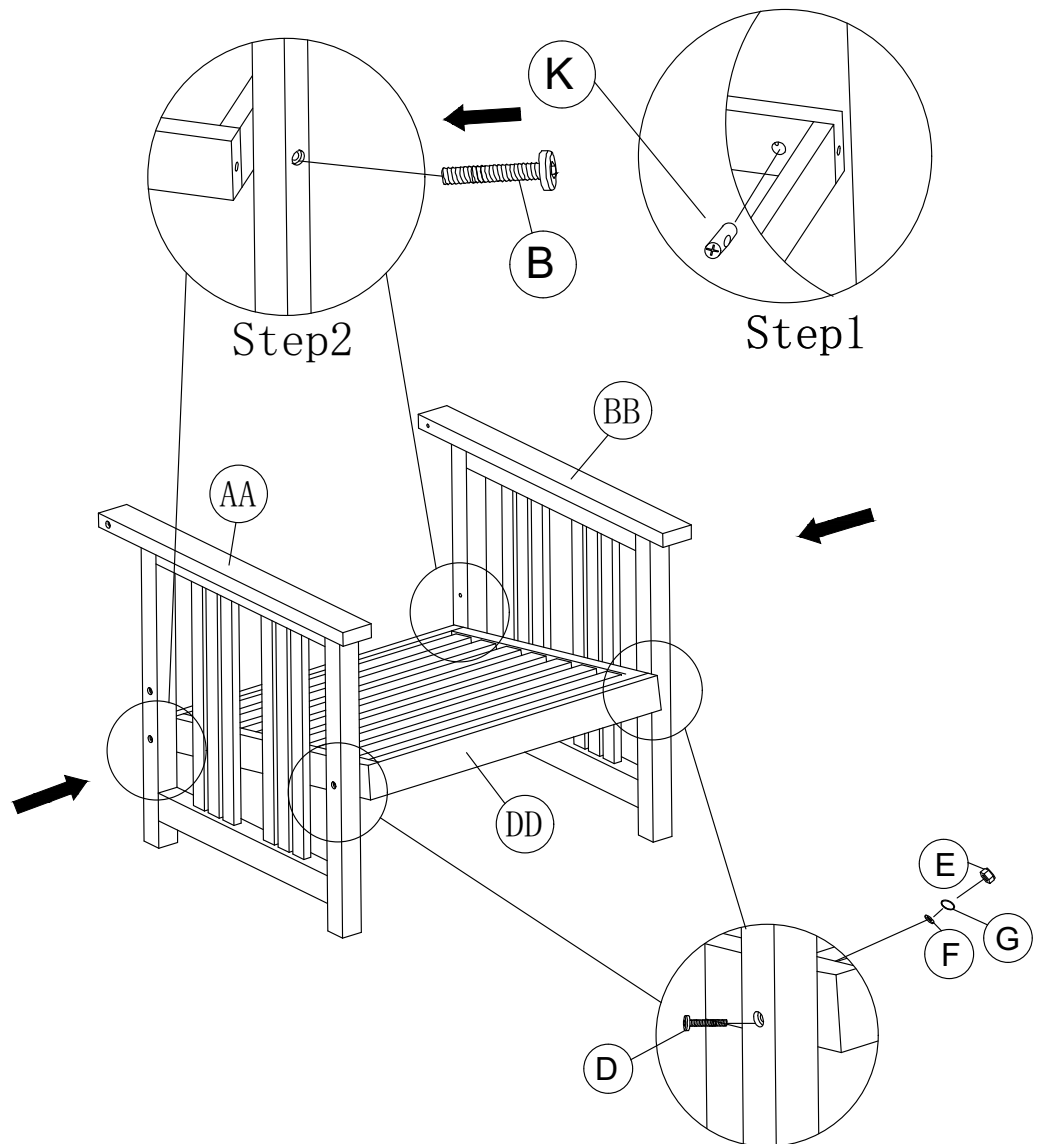



UPDF

WWW.UPDF.CN

02

M6*80



C x02
M6*100



E x04
M6




F x04
Φ16*1.4




G x04
Φ9.3*3



02

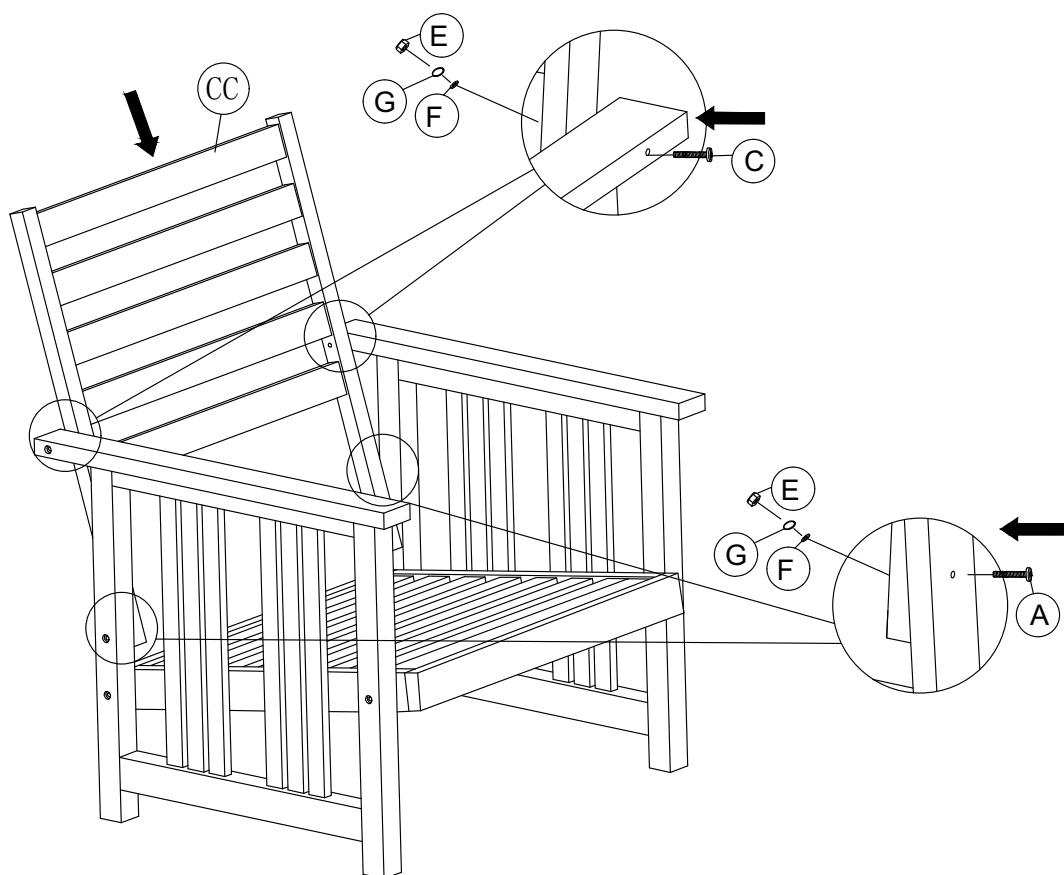

H x08
M6*45



03

